

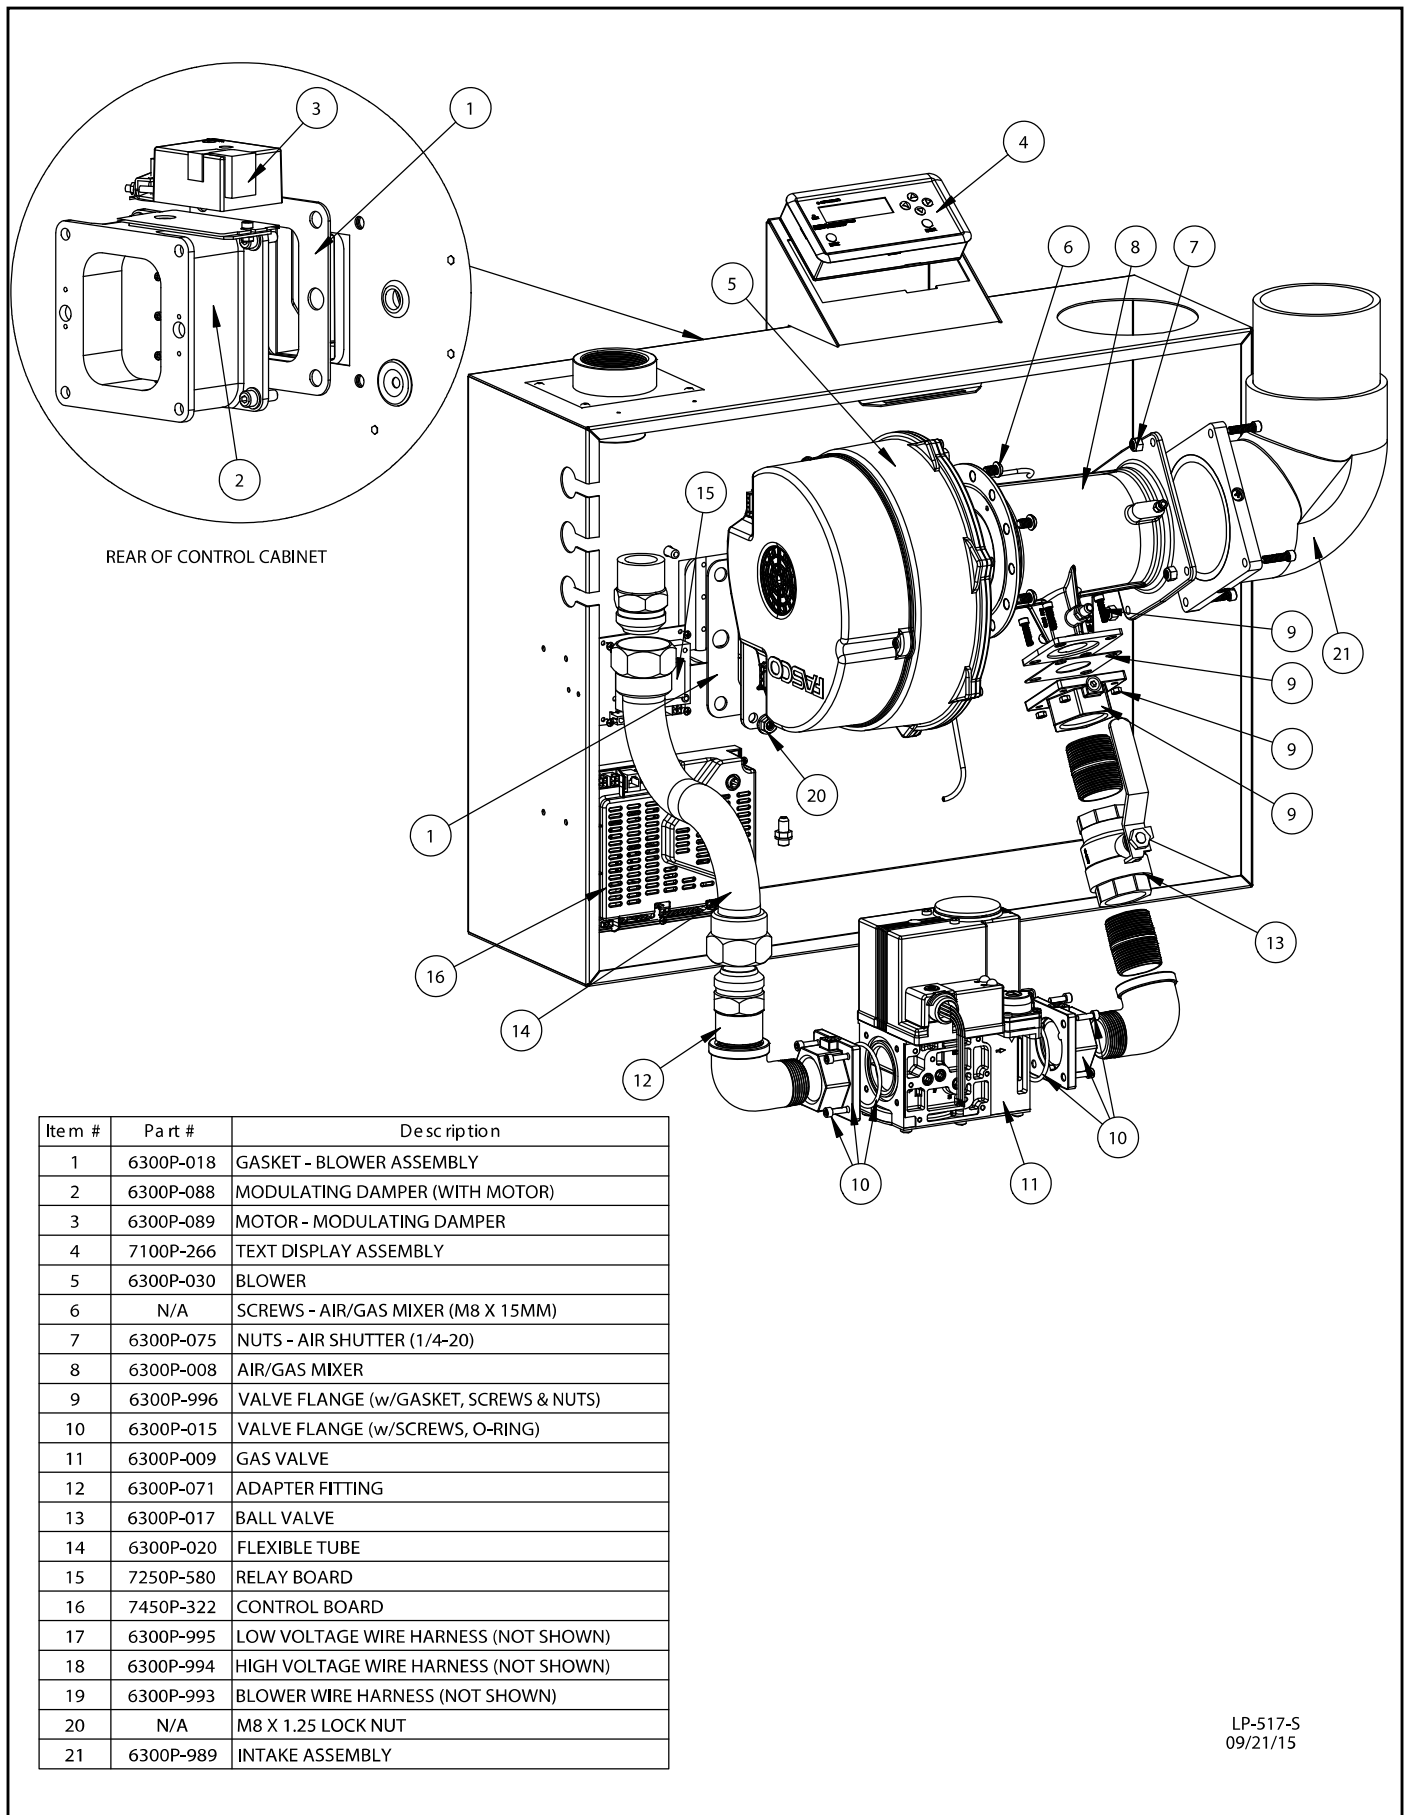


Figure 43 - Combustion System Replacement Parts

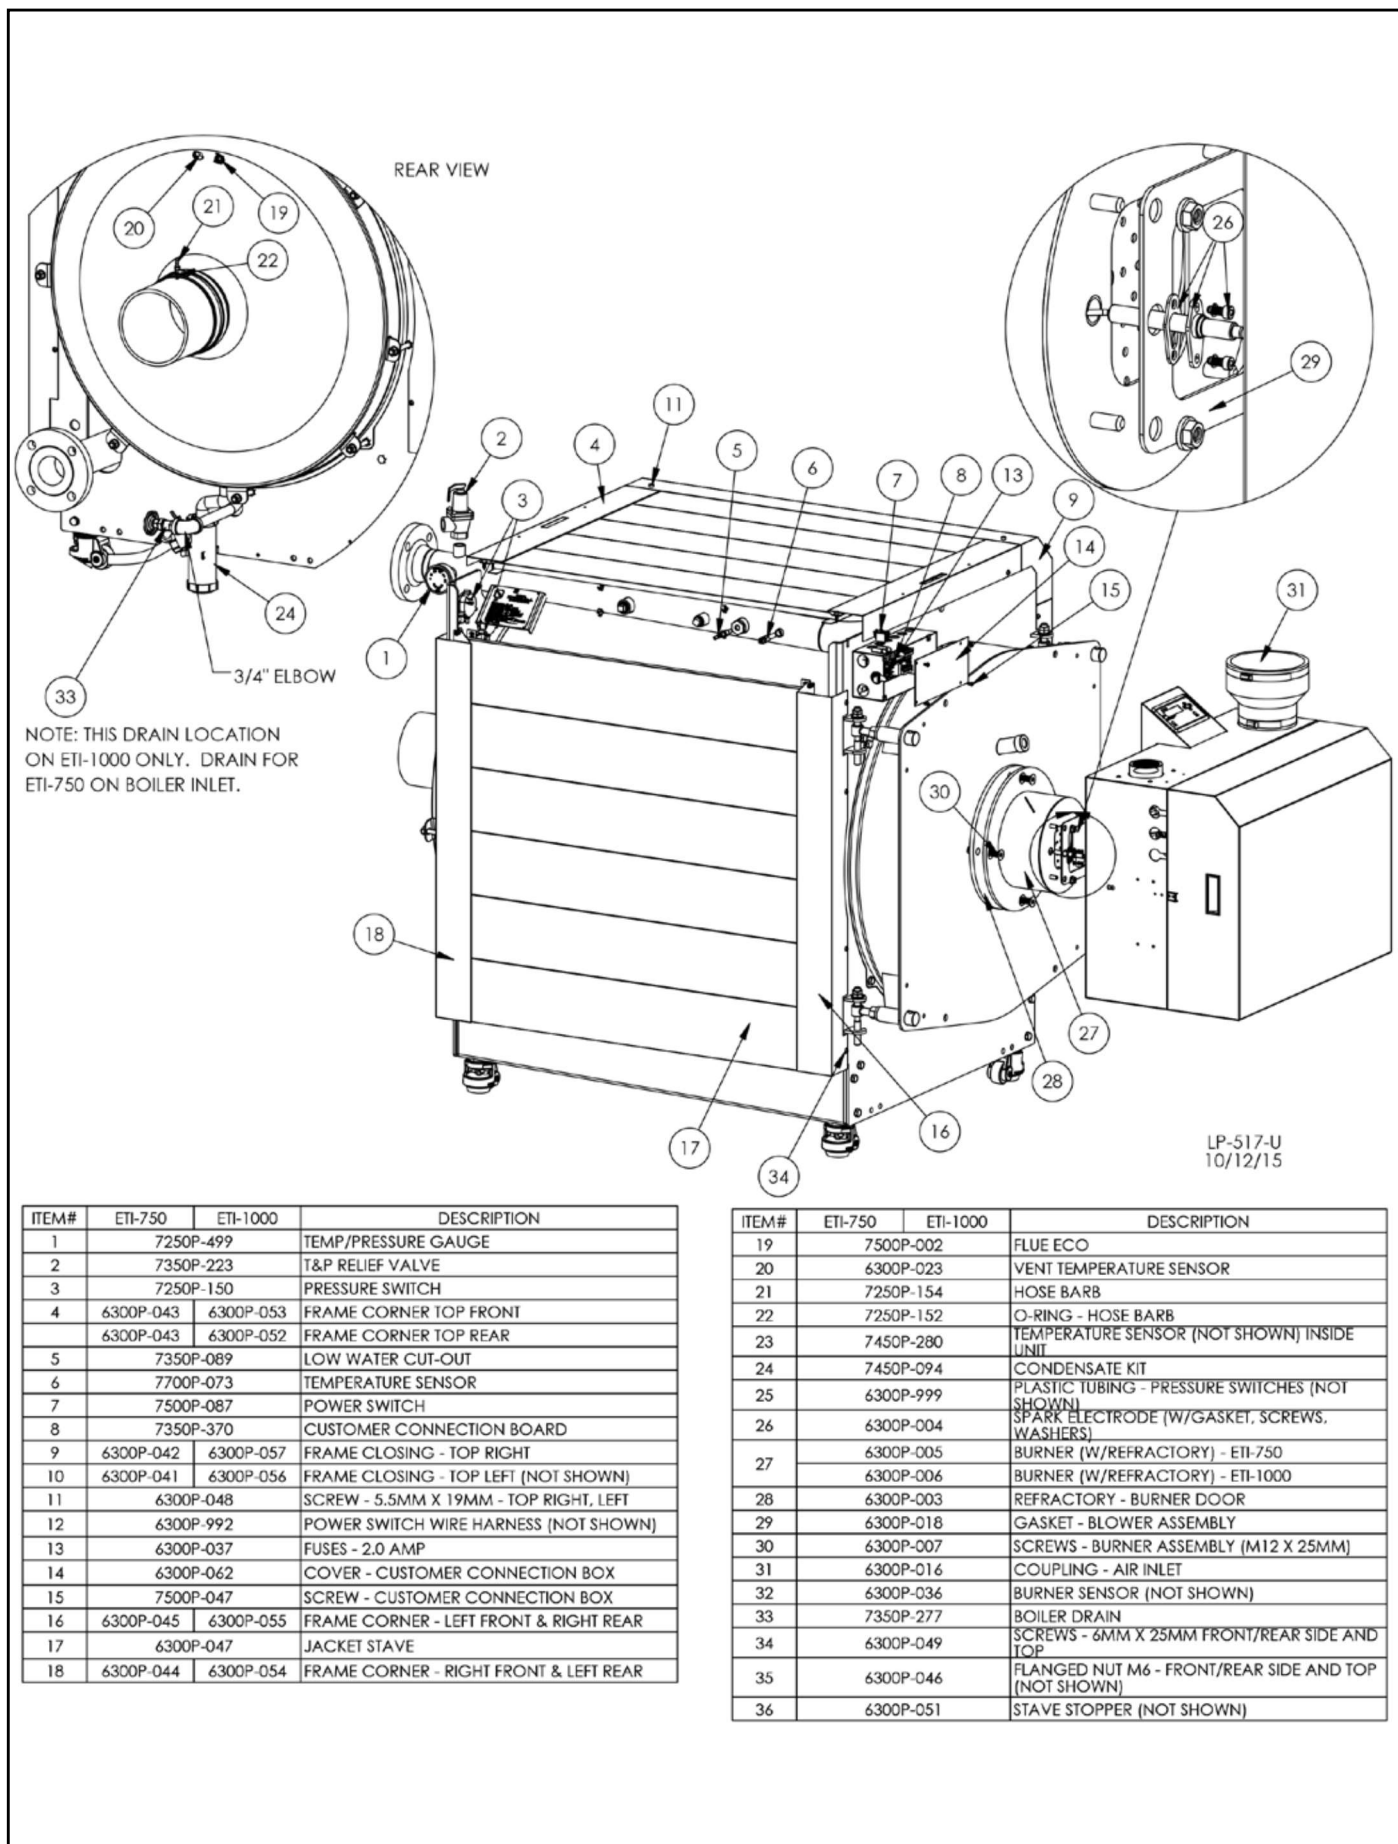


Figure 44 - Exterior Replacement Parts

Part 14 - Installing the Optional Jacket

INSTALL STAVE STOPPER

STAVE

11

4

1

3

2

2

10

9

INSTALL FRAME CLOSING BRACKETS USING SCREWS/NUTS AS SHOWN

9

INSTALL CORNER BRACKETS USING SCREWS/NUTS AS SHOWN

SLIDE STAVES INTO SIDE AND TOP BRACKETS AS SHOWN

5

5

7

6

8

INSTALL FRAME CLOSING BRACKETS USING SCREWS AS SHOWN

LP-517-Y
08/05/15

ITEM #	750	1000	DESCRIPTION	QTY.
1	6300P-045	6300P-055	LEFT FRONT/RIGHT REAR CORNER	2
2	6300P-044	6300P-054	RIGHT FRONT/LEFT REAR CORNER	2
3	6300P-043	6300P-053	FRAME CORNER TOP FRONT	1
4		6300P-052	FRAME CORNER TOP REAR	1
5		6300P-047	JACKET STAVE	17
6	6300P-042	6300P-057	FRAME CLOSING TOP RIGHT	1
7	6300P-041	6300P-056	FRAME CLOSING TOP LEFT	1
8		6300P-048	SOCKET HEAD SCREW - 5.5 X 19MM	12
9		6300P-049	BUTTON HEAD CAP SCREW - M6 X 25MM	12/20*
10		6300P-046	FLANGED NUT - M6	12/20*
11		6300P-051	STAVE STOPPER	68

* NOTE: QUANTITY IS AS FOLLOWS: 750/1000

Table 28 - Optional Jacket Replacement Parts