#### H. PIPING DIAGRAMS

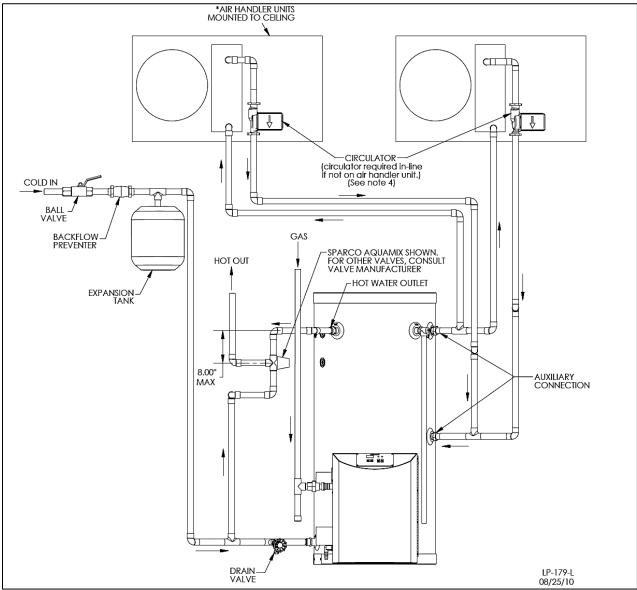


Figure 5 - Phoenix Model With Air Handler - NOTES:

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Check with air handler manufacturer for proper sizing.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes.

#### NOTES FOR AIR HANDLER APPLICATION:

- 1. MASSACHUSETTS STATE PLUMBING CODE REQUIRES A DISTANCE NO GREATER THAN 50 FEET FROM THE WATER HEATER TO THE FAN COIL IN THE AIR HANDLER.
- 2. MASSACHUSETTS STATE PLUMBING CODE REQUIRES AN ELECTRONICALLY TIMED CIRCULATOR PUMP TO ACTIVATE EVERY SIX HOURS FOR 60 SECONDS. THIS CIRCULATOR IS REQUIRED TO BE BRONZE OR STAINLESS.
- 3. ALL WATER PIPING MUST BE INSULATED.
- 4. YOU MUST INSTALL A VACUUM RELIEF VALVE PER 248 CMR.

NOTE: THIS DRAWING IS MEANT TO DEMONSTRATE SYSTEM PIPING ONLY. THE INSTALLER IS RESPONSIBLE FOR ALL EQUIPMENT AND DETAILING REQUIRED BY LOCAL CODES.

## A DANGER

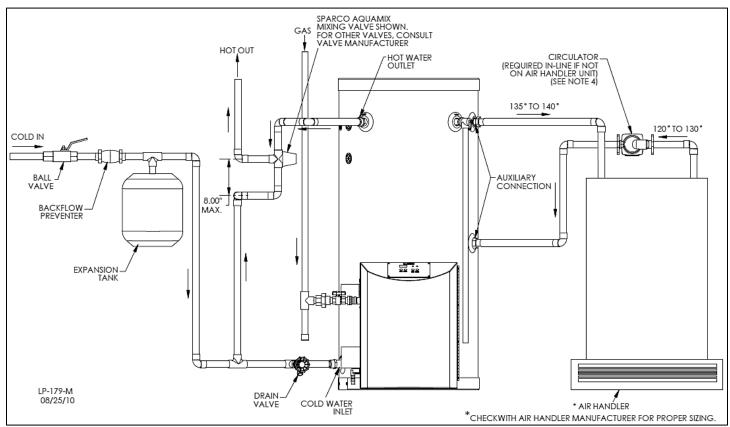


Figure 6 - Phoenix Model with Air Handler on Side

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Check with air handler manufacturer for proper sizing.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR. With air handlers, outdoor reset is available with an outdoor sensor. See Part 8, Section D.

### NOTES FOR AIR HANDLER APPLICATION:

- 1. MASSACHUSETTS STATE PLUMBING CODE REQUIRES A DISTANCE NO GREATER THAN 50 FEET FROM THE WATER HEATER TO THE FAN COIL IN THE AIR HANDLER.
- 2. MASSACHUSETTS STATE PLUMBING CODE REQUIRES AN ELECTRONICALLY TIMED CIRCULATOR PUMP TO ACTIVATE EVERY SIX HOURS FOR 60 SECONDS. THIS CIRCULATOR IS REQUIRED TO BE BRONZE OR STAINLESS.
- 3. ALL WATER PIPING MUST BE INSULATED.
- 4. YOU MUST INSTALL A VACUUM RELIEF VALVE PER 248 CMR.

NOTE: THIS DRAWING IS MEANT TO DEMONSTRATE SYSTEM PIPING ONLY. THE INSTALLER IS RESPONSIBLE FOR ALL EQUIPMENT AND DETAILING REQUIRED BY LOCAL CODES.

## A DANGER

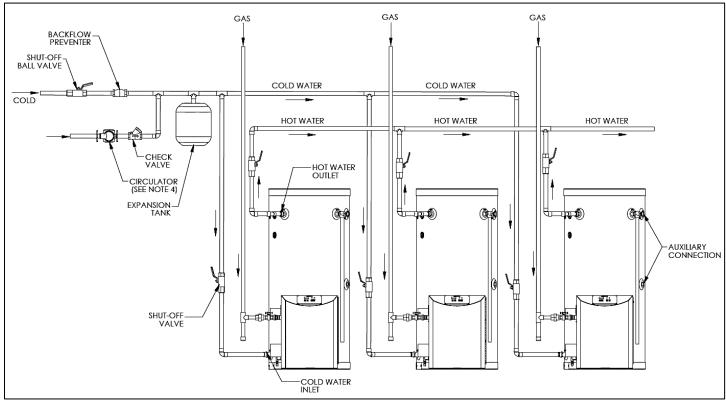


Figure 7 - Reverse Manifold and Piping Diagram for Phoenix Models - LP-179-N

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Check with air handler manufacturer for proper sizing.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR. With air handlers, outdoor reset is available with an outdoor sensor. See Part 8, Section D.

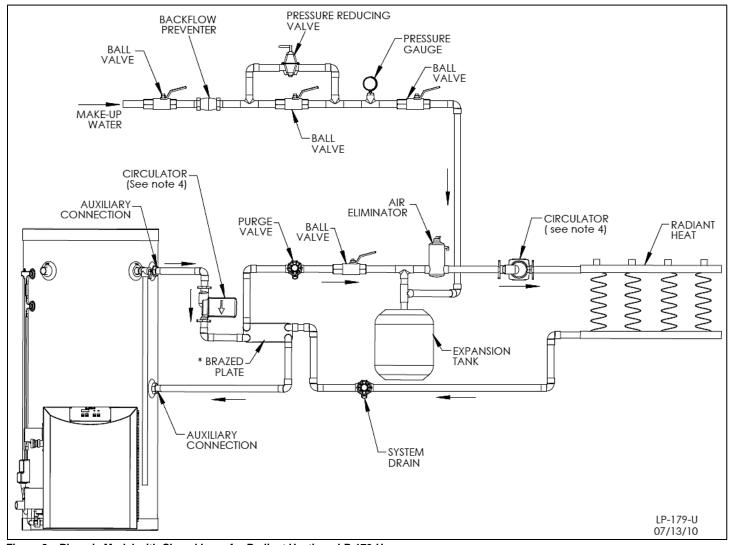


Figure 8 – Phoenix Model with Closed Loop for Radiant Heating - LP-179-U

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Check with brazed plate manufacturer for correct plate connections and orientation.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR. With air handlers, outdoor reset is available with an outdoor sensor. See Part 8, Section D.

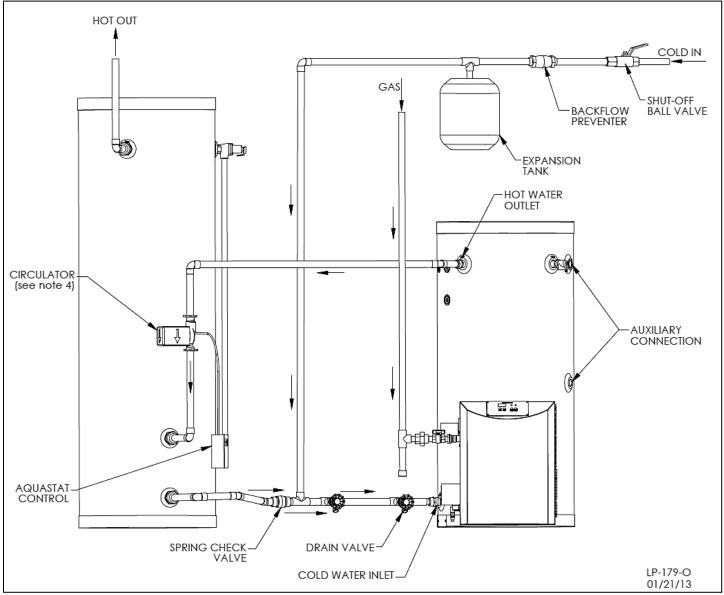


Figure 9 - Phoenix Model With Storage Tank

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Drains and check valve between unit and storage tank will assist in purging air from system.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR.

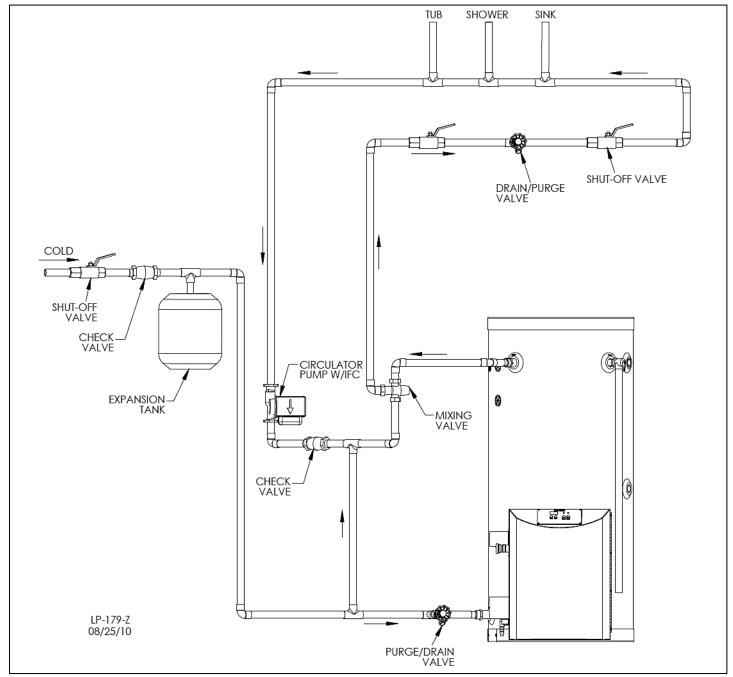


Figure 10 – Phoenix Model with Recirculation Line and Thermostatic Mixing Valve Piping

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Drains and check valve between unit and storage tank will assist in purging air from system.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR.

### A DANGER

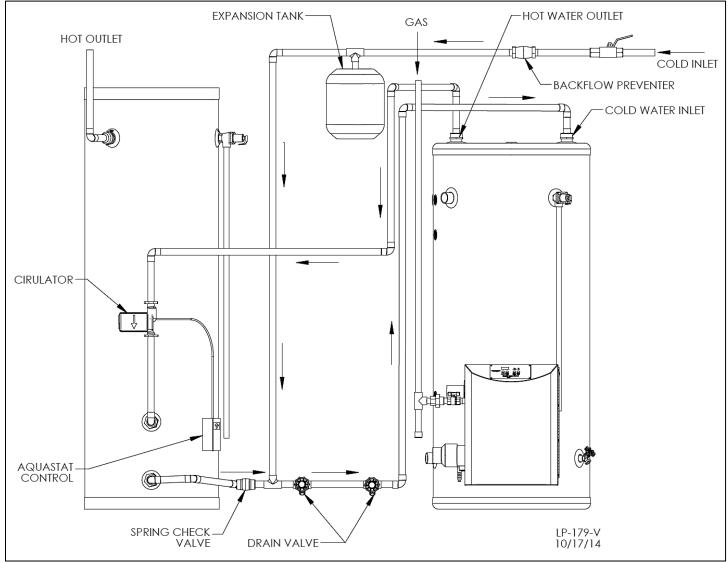


Figure 11 - Phoenix Multi Fit Model with Storage Tank and Thermostatic Mixing Valve

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Drains and check valve between unit and storage tank will assist in purging air from system.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR.

# **A** DANGER


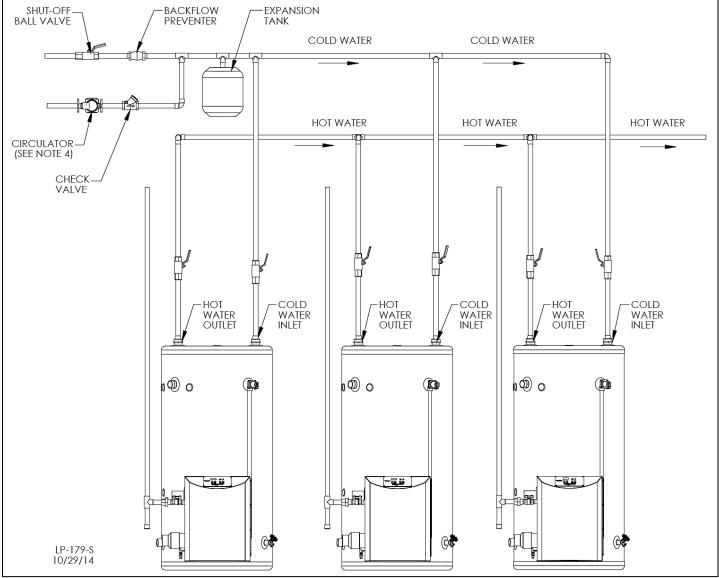


Figure 12 - Reverse Manifold and Piping Diagram for Phoenix Multi Fit Model

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Check with air handler manufacturer for proper sizing.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR. With air handlers, outdoor reset is available with an outdoor sensor. See Part 8, Section D.

### **CAUTION**

The standard unit does not meet the required temperature settings for sanitizer booster applications. Use only the Phoenix Sanitizer Booster that delivers temperatures of 184°F. Inlet water to the booster must be supplied at 140°F.

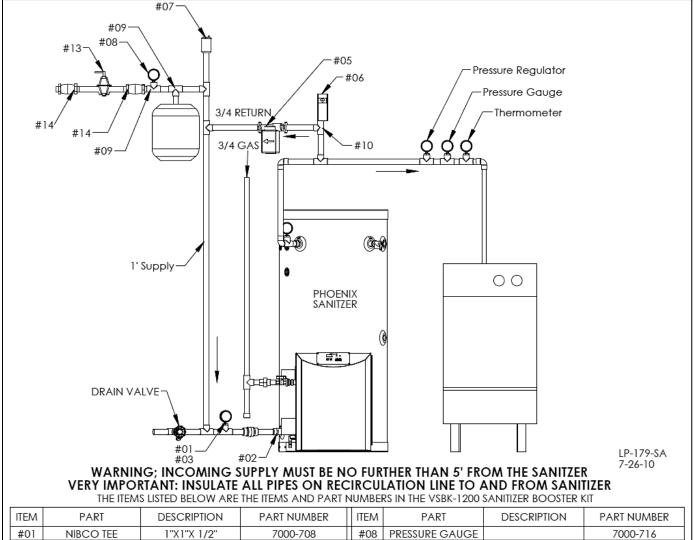

ITEM	PART	DESCRIPTION	PART NUMBER	ITEM	PART	DESCRIPTION	PART NUMBER
#01	NIBCO TEE	1"X1"X 1/2"	7000-708	#08	PRESSURE GAUGE		7000-716
#02	FEMALE ADAPTER	1"	7000-709	#09	NIBCO TEE	1" X 1" X 3/4" 712R	7000-728
#03	DIAL THERMOMETER		7000-710	#10	NIBCO TEE	1" X 1/2" X 1" COPPER	7000-739
#04	EXPANSION TANK 4.5 GAL		7000-711	#11	NIBCO TEE	1" X 1/2" X 1"R	7000-730
#05	GRUNDFOS 3 SPEED PUMP	W/ CHECK VALVE	7000-712	#12	REDUCING COUPLING		7000-732
#06	NIBCO TEE	1/2" X 1/2" FITTING AIR CHAMBER	7000-737	#13	PRESSURE REDUCING VALVE		7000-733
#07	VACUUM RELIEF VALVE		7000-714	#14	NIBCO MALE ADAPTERS		7000-736

Figure 13 - Phoenix Sanitizer Booster Installation - PH130-55SA / PH199-55SA - LP-179-SA

#### **NOTES**

- 1. Minimum pipe size should match unit connection size. Upsize pipe accordingly if greater flow is required.
- 2. A thermal expansion tank suitable for potable water must be sized and installed within this piping system between the backflow preventer and the cold water inlet.
- 3. Gas line must be rated to the unit maximum input capacity. Unit must have 10 feet of pipe after gas regulator.
- 4. All circulators should have an integral flow check.
- 5. Drains and check valve between unit and storage tank will assist in purging air from system.
- 6. This drawing is meant to demonstrate system piping only. The installer is responsible for all equipment and detailing required by local codes. In Massachusetts, you must install a vacuum relief valve per 248 CMR.
- 7. For further energy savings, install the Phoenix Sanitizer Booster on the same electrical circuit as the dishwasher.